



This information is brought to you by  
Owls Hall Environmental working in  
partnership with Klargester products.



*Excellent Treatment*

**0845 375 1801**  
[www.ohel.co.uk](http://www.ohel.co.uk)

# INSTALLATION GUIDELINES FOR BIODISC UNITS BC & NC



<b>Klargester Environmental</b>	
<b>College Road North, Aston Clinton, Aylesbury, Buckinghamshire, HP22 5EW</b>	
Tel: +44 (0)1296 633033	Fax: +44 (0) 1296 633001
Website: <a href="http://www.klargester.co.uk">www.klargester.co.uk</a>	Email: <a href="mailto:uksales@klargestere.co.uk">uksales@klargestere.co.uk</a>

## HEALTH AND SAFETY

**These warnings are provided in the interest of safety. You must read them carefully before installing or using the equipment.**

It is important that this document is retained with the equipment for future reference. Should the equipment be transferred to a new owner, always ensure that all relevant documents are supplied in order that the new owner can be acquainted with the functioning of the equipment and the relevant warnings.

Installation should only be carried out by a suitably experienced contractor, following the Guide-Lines supplied with the equipment.

We recommend the use of a dust mask and gloves when cutting GRP components.

Electrical work should be carried out by a qualified electrician.

Sewage and sewage effluent can carry micro-organisms harmful to human health. Any person carrying out maintenance on the equipment should wear suitable protective clothing, including gloves. Good hygiene practice should also be observed.

Covers must be kept locked.

Observe all hazard labels and take appropriate action to avoid exposure to the risks indicated.

The correct ongoing maintenance is essential for the proper operation of the equipment. Klargester offer a range of maintenance contracts, details on request.

Should you wish to inspect the operation of the equipment, please observe all necessary precautions, including those listed below, which apply to maintenance procedures.

BioDisc units contain rotating machinery and associated drive chains or belts.

Ensure that you are familiar with the safe working areas and accesses.

Ensure that the working area is adequately lit.

The power supply to the equipment must be isolated at the control panel(s) before lifting the covers. Where a specific maintenance procedure requires the equipment to be running with the covers off, all care must be taken to avoid contact with moving parts and electrical components or conductors. Drive guards must be replaced and secured if removed during maintenance.

Once power has been isolated, the control panel must be kept locked shut to avoid accidental re-connection whilst work or inspection is being carried out.

Use only the designated access walkways. Do not walk on the cover or deep well safety mesh(s). Desludge port covers, where fitted, must be replaced if removed.

Take care to maintain correct posture, particularly when lifting. Use appropriate lifting equipment when necessary. Keep proper footing and balance at all times. Avoid any sharp edges.

Desludging should be carried out by a contractor holding the relevant permits to transport and dispose of sewage sludge. The contractor must refer to the desludge instructions in the Operating Manual, a copy of which is fastened under the covers.

## CONTENTS

	Page
<b>Health &amp; Safety</b> .....	1
<b>1.0</b> Introduction .....	2
<b>2.0</b> Handling & Storage .....	2
<b>3.0</b> Site Planning .....	3
<b>4.0</b> Installation - General .....	3
Concrete Specification.....	4
<b>5.0</b> BioDisc Installation .....	4
<b>6.0</b> Control Panel Installation.....	6
<b>7.0</b> Ancillary Equipment.....	7
<b>8.0</b> Start Up.....	7
<b>Declaration of Conformity</b> .....	7

### Appendices

BioDisc Wiring Diagrams:      510101      BC Single phase   Included

Wiring diagrams below are provided within the control panel housing, If you require an additional copy, please contact us.

510009	BC Single phase Alarm Control Panel
510030	BC Three phase
510003	BC Three phase Alarm Control Panel
510012	NC Single phase
510013	NC Single phase Alarm Control Panel
510006	NC Three phase
510007	NC Three phase Alarm Control Panel
510018	Loss of Rotation Alarm Module (Independent Remote Alarm)

### 1.0 Introduction

These Guidelines represent Best Practice for the installation of these Klargester BioDisc Units. Many years of specialist experience has led to the successful installation of thousands of BioDisc units. It must be noted, however, that these Guidelines are necessarily of a general nature. It is the responsibility of others to verify that they are appropriate for the specific ground conditions and in-service loads of each installation. Similarly, any information or advice given by employees or agents of Klargester regarding the design of an installation must be verified by a qualified specialist (e.g. civil engineering consultant).

### 2.0 Handling & Storage

- 2.1. Care must be taken to ensure that the unit is not damaged during delivery and handling on site.
- 2.2. The design requirements of Klargester products will frequently mean that the centre of gravity of the unit is "offset". Care must therefore be taken to ensure that the unit is stable when lifting. Rainwater may collect also inside units, particularly if they have been stored on site prior to installation, adding weight and increasing instability. Check units before lifting and pump out any excess water.
- 2.3. When lifting the unit, use webbing slings of a suitable specification, which must be attached to the designated lifting points.
- 2.4. Do not use chains.
- 2.5. Lifting equipment should be selected by taking into account the unit weight, length and the distance of lift required on site.
- 2.6. Klargester Environmental accepts no responsibility for the selection of lifting equipment.
- 2.7. Whenever Klargester BioDiscs are stored or moved on site, ensure that the storage location is free of rock, debris and any sharp objects which may damage the unit. The BioDisc must be placed on ground which is flat and level to evenly support the base of the unit.

### 3.0 Site Planning

The following points should be considered before installation of the equipment:

- 3.1. The discharge must have the consent of the relevant Environmental Regulator.
- 3.2. The installation should have Planning and Building Control approval.
- 3.3. Ground conditions and water table level should be assessed. If the water table will be above the base of the unit at any time of the year, adequate concrete backfill must be provided to avoid flotation. In poorly draining ground, consideration should also be given to the likelihood of flotation due to surface water collecting in the backfill. It should be borne in mind that the inlet drain trench will act as a land drain, directing surface water to the backfill around the unit.
- 3.4. If discharge is to a soakaway, a porosity test should be carried out in accordance with BS 6297 to assist in assessing sub-soil drainage and designing the sub-surface irrigation system.
- 3.5. The BioDisc system must be installed at a level which will allow connection to the incoming drain and a free discharge at the system outlet.
- 3.6. The drainage system connecting to the BioDisc must be adequately vented in accordance with the Building Regulations. The head of the drainage system should be connected to a stack pipe, open at high level, so as to draw foul air from the system and sited with consideration to prevailing wind direction. Tile vents & Air admittance valves should not be used as the sole drainage ventilation facility, but if this cannot be avoided, the BioDisc should be independently ventilated. All inspection points within the drain system should be sealed so as to enable ventilation at high level.
- 3.7. The unit should be installed so that the bottom lip of the cover is 65mm above local ground level. If the unit has to be recessed, measures must be taken to ensure that it cannot be flooded by surface water run-off.
- 3.8. There must be at least 1 metre of clear, level ground all around the unit to allow for routine servicing.
- 3.9. The unit should be installed as far as possible from any habitable building. Many Local Authorities will insist on a minimum distance of 15 metres.
- 3.10. Adequate access must be provided for routine de-sludging and maintenance. Vehicles should not be permitted within a distance equal to the depth of the unit, unless suitable structural protection is provided to the installation.
- 3.11. BioDisc covers are not suitable for walking on. Where necessary the BioDisc should be fenced off or otherwise protected. Maintenance access must be maintained as above.
- 3.12. An adequate electrical supply must be provided, complying with current electrical regulations. The electrical details in Section 6.2.6. will enable selection of suitable cable and current overload protection, taking into account the distance from the power source to the control panel and any other relevant factors. In most cases steel wire armoured (S.W.A).cable, minimum 1.5sq mm will be suitable, but this is a minimum recommendation and selection is the responsibility of the installing electrician. Although not obligatory for an installation of this type, RCD protection is suggested as an extra precaution.
- 3.13. Pump stations or any other associated equipment should have a separate power supply.
- 3.14. Proximity to a mains water hosepipe connection point is recommended, for maintenance purposes. Such a supply should be connected in accordance with water bylaws and regulations. **Never leave a hose connected and immersed in sewage.**
- 3.15. Installation should only be carried out by suitably qualified and experienced contractors in accordance with the Health and Safety at Work Act. Electrical work should be carried out by a qualified electrician, working to the latest edition of IEE.

### 4.0 Installation - General

- 4.1. When units are installed in unstable ground conditions where movement of the surrounding material and/or unit may occur, the connecting pipework should be designed to minimise the risk of damage from differential movement of the unit(s) and/or surrounding material.
- 4.2. In situations where the excavation will not maintain a vertical wall, it will be necessary to support side walls of the excavation (E.g. with suitable trench sheets and bracing systems) to maintain a vertical wall from the bottom to the top of the excavation. DO NOT completely remove the shoring system until after the backfilling is complete, but before the concrete fully hardens.
- 4.3. In areas where the water table is above the bottom of the excavation and/or the excavation is liable to flood, the excavation should be de-watered, using suitable pumping equipment, until the installation is complete. In such conditions it may be advisable to line the excavation with polythene sheeting, to prevent cement being washed out of the concrete surround/base.

- 4.4. During installation, care must be taken to ensure that the body of the unit is uniformly supported so that point loads through the unit are avoided.
- 4.5. A water supply must be available on site to enable the unit to be ballasted during backfilling.
- 4.6. Concrete Specification SK296 is a *general* specification. It is not a site-specific installation design.
- 4.7. **A Dry Site** is defined as one where groundwater lies below the base of the excavation at all times and the subsoil is free-draining. If in any doubt, assume "Wet Site" conditions.

**A Wet Site** is defined as one where the subsoil is not free draining (e.g. clay) or ground water lies above the base of the excavation at any time.

**Note: Units with 1100mm deep inlet invert must always be installed according to the guidelines for wet sites, irrespective of site conditions.**

<b>CONCRETE SPECIFICATION SK296 IN ACCORDANCE WITH BS 5328 PARTS 1,2,3 AND 4</b>	
TYPE OF MIX	DESIGN
PERMITTED TYPE OF CEMENT	BS 12 (OPC): BS 12 (RHPC): BS 4027 (SRPC)
PERMITTED TYPE OF AGGREGATE (coarse & fine)	BS 882
NOMINAL MAXIMUM SIZE OF AGGREGATE	20 mm
GRADES: C30 (30 N/mm <sup>2</sup> ) C30 (30 N/mm <sup>2</sup> ) C20 (20 N/mm <sup>2</sup> )	REINFORCED & ABOVE GROUND WITH HOLDING DOWN BOLTS REINFORCED (EG. FOR HIGH WATER TABLE) UNREINFORCED (NORMAL CONDITIONS)
MINIMUM CEMENT CONTENT	C30 270 - 280 Kg/M <sup>3</sup> C20 220 - 230 Kg/M <sup>3</sup>
SLUMP (NOT IN ACCORDANCE WITH BS 5328)	25mm
RATE OF SAMPLING	READY MIX CONCRETE SHOULD BE SUPPLIED COMPLETE WITH APPROPRIATE DELIVERY TICKET IN ACCORDANCE WITH BS 5328 PART 3
<b>NOTE: STANDARD MIXES SHOULD NOT BE USED WHERE SULPHATES OR OTHER AGGRESSIVE CHEMICALS EXIST IN GROUND WATER</b>	

## 5.0 BioDisc Installation

- 5.1. Remove the package tied to the outside of the unit. This contains a copy of the Installation Guidelines and a cover key.
- 5.2. Excavate a hole of sufficient length and width to accommodate the unit and a minimum of 150mm concrete surround and to a depth which allows for the burial depth of the unit plus a minimum 150mm thick concrete base. Note that the base must be at least 50mm wider than each of the steel fixing plates at the base of the unit.
- 5.3. Construct a suitable concrete base slab, a minimum of 150 mm thick, appropriate to site conditions. In wet or unstable ground conditions it may be necessary to lay a hard-core sub-base (see notes 3.3 & 4.3). Ensure that the slab is flat and level. Allow the slab to set sufficiently to support the installed load, but not so much as to prevent subsequent backfill bonding fully to the base.
- 5.4. Ensure that the slab is free of any stones or other material which could damage the unit. Lower the unit onto the slab using suitable webbing slings and lifting equipment.
- 5.5. Remove the covers by undoing the locks and folding the covers before lifting them off.
- 5.6. Remove the Control Panel and Owners Pack from the inside the unit.
- 5.7. Check that the inlet and outlet orientation is correct and that the unit is level. The unit must be level from side to side within 5mm at the top flange. If necessary, lift the unit off the base and apply further concrete as needed to level up.
- 5.8. It is essential that the flange levels are checked regularly throughout the installation process. Should the unit become out of level, immediate remedial action is advised, to maintain the unit within the levels stated in section 5.7.

- 5.9. Pour water into the primary (inlet) chamber and the final (outlet) chamber, to a depth of 1 metre. As backfilling proceeds maintain the water level 200-250mm above the backfill level, but do not attempt to fill the unit with water above the outlet level.
- 5.10. Place concrete backfill to approximately 1 metre above the unit base, ensuring good compaction to avoid voids. **Do not use vibrating pokers.** Keep the concrete at an even level all round the unit, compacting in layers. Note that the steel plates at the base of the unit are provided to anchor the unit into the concrete backfill and prevent flotation due to groundwater after installation; the concrete backfill must exceed the plate length by least 50mm.
- 5.11. Continue backfilling according to site conditions (see section 4.7).


**Note: 1100mm inlet invert depth units must be installed as for Wet Site.**

**Wet Site :**

1. Raise the water level inside the unit to just below the outlet.
2. Continue backfilling with concrete up to the level of the outlet.

**Dry Site :**

1. Raise the water level inside the unit to just below the outlet.
2. Continue backfilling to the outlet level with concrete, pea shingle (3-18mm), or similar non-cohesive, non-compressible free-flowing granular material. **Do not use sand.**

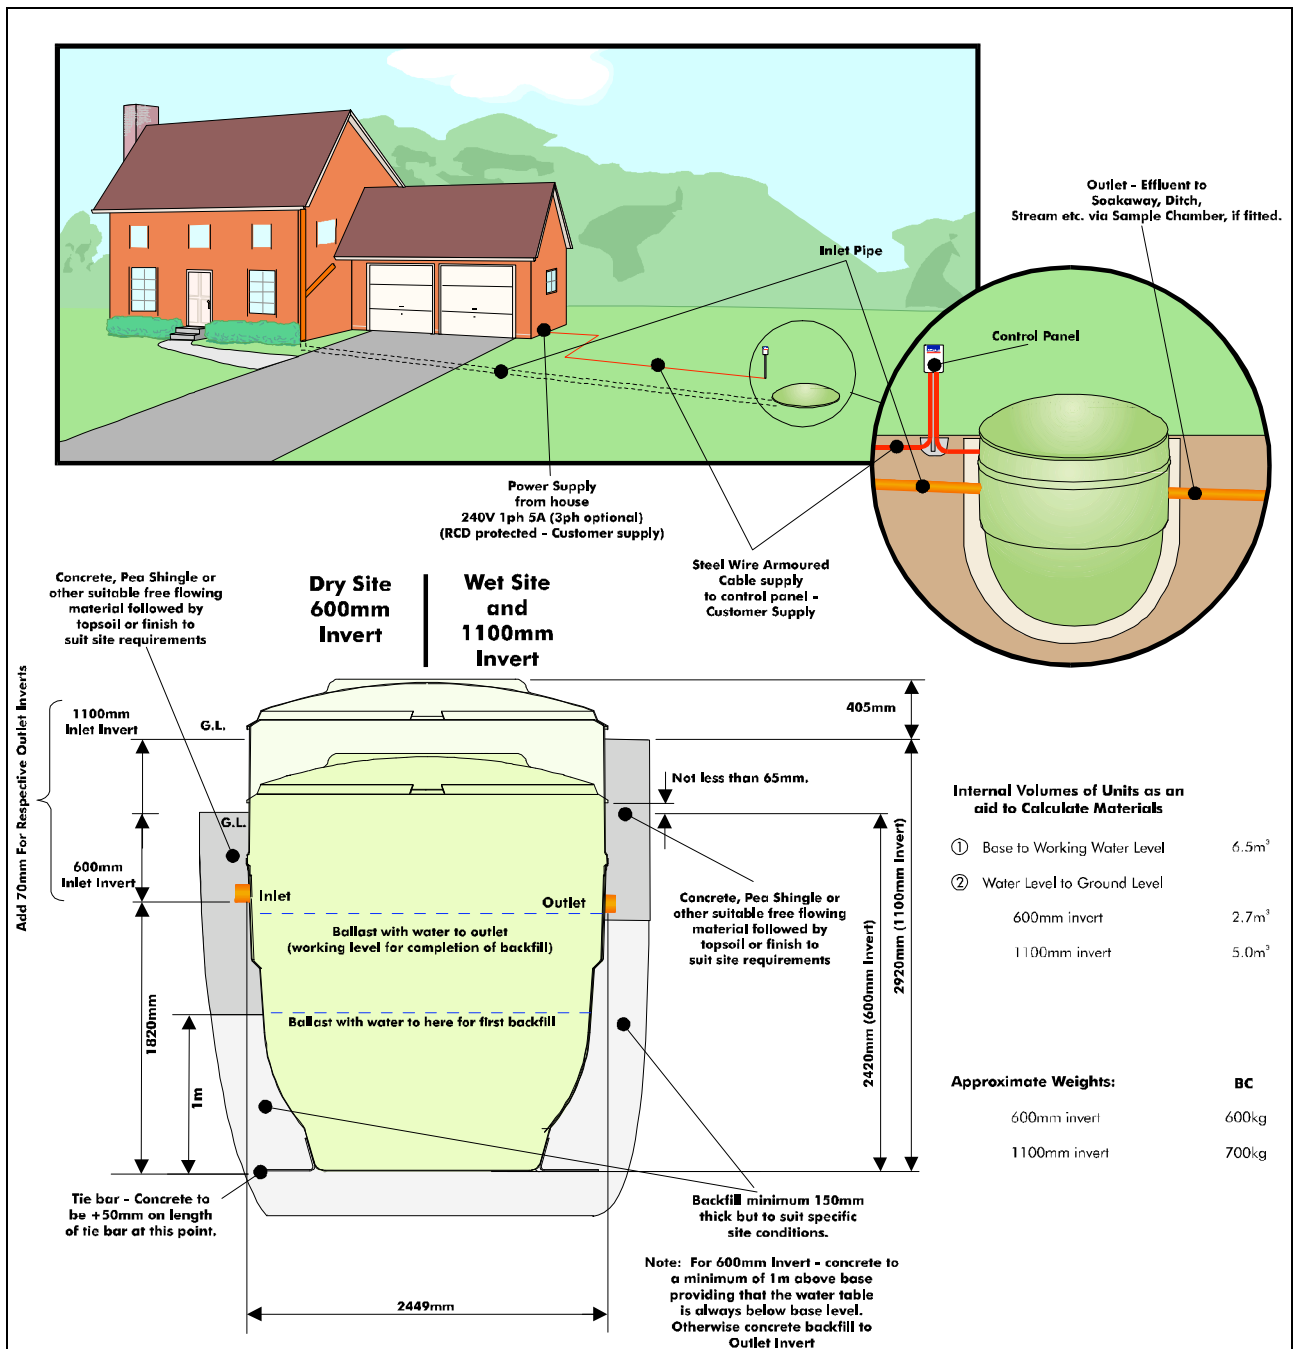

- 5.12. Connect the inlet and outlet pipework when safe access can be gained. Short lengths of “rocker” pipe with flexible joints should be used adjacent to the unit to allow for any minor differential movement.
- 5.13. Check the cables attached to the Control Panel and drill the corresponding number of 40mm holes in the BioDisc case, 100mm below ground level and adjacent to one end of the baffle supporting the Motor/gearbox. If an Independent Remote Alarm is to be fitted this will also require a 40mm hole.
- 5.14. Erect the Control Panel as described in Section 6.0.
- 5.15. Continue to backfill, with concrete or free flowing granular material, up to ground level. The finished surface should be 65mm minimum lower than the lip of the cover.
- 5.16. Important : Read section 8.2 regarding delayed electrical installation.

## 6.0 Control Panel Installation

### 6.2. General Installation

- 6.1.1. The control panel should be positioned adjacent to the unit, so that:
  - a) It does not interfere with cover removal.
  - b) It is convenient for the incoming power supply.
  - c) It cannot be reached by someone standing in or on the BioDisc unit.

- d) It is close enough to enable the electrical connections to be made in the BioDisc.

This usually indicates a panel position about 1.5 metres distance from the BioDisc.

- 6.1.1. Set the panel leg(s) in a concrete base, minimum 250mm thick and prop the panel to prevent movement until the concrete has set. Allow 350mm minimum clearance from ground level to the bottom of the panel.
- 6.1.2. Control panels are supplied with pre-fitted cable(s) within a conduit, complete with grommets and glands. Lay the cable(s) in a 500mm deep trench and bed them on a layer of sand or similar soft material.
- 6.1.3. Insert the cables through the hole(s) in the casing of their respective unit(s), using the grommets supplied. Leave the cable(s) temporarily secured above water level pending electrical installation.
- 6.1.4. Cover the cable(s) with a layer of sand or similar soft material and warning tape. Backfill the cable trench with graded spoil, free of large stones or any other material which might damage the cable(s).
- 6.1.5. The Control Panel key is in the protective bag at the end of the motor/gearbox cable.

## **6.2. Electrical Installation**

- 6.2.1. Depending on type, the control panel is supplied with between one and three pre-fitted cables.
  - a) Every Control Panel has a motor/gearbox cable.
  - b) Control Panels for NC units have an additional Sludge Return Pump cable.
  - c) Alarm Control Panels have an extra cable for the Loss of Rotation sensor.Each cable is fitted with a gland for connection to the terminal box or junction box and a grommet for entry into the BioDisc case.
- 6.2.2. Refer to the wiring diagram enclosed within the panel and connect the cable(s) to the appropriate electrical junction(s) in the BioDisc, fitting the glands supplied. The cables can be identified by their numbered end connectors which correspond to connection points in the BioDisc. The end numbers on the motor/gearbox cable correspond with the numbered terminals in the motor/gearbox terminal box.
- 6.2.3. Units with an Alarm Control Panel or optional Independent Remote Alarm (used in conjunction with a standard Control Panel) will be supplied with a fixing kit. Install the kit in accordance with the installation instructions provided. Please note that the Remote Alarm Unit should not be installed more than 100 metres from the BioDisc and that the interconnecting cable (customer supply) should be laid in a separate trench to prevent electrical interference
- 6.2.4. Ensure that cables inside the BioDisc are securely tied to the structure, clear of the drive arrangement and do not present a trip hazard.



	Connection Point	Connector Type	End Numbers
Motor/Gearbox	Motor/Gearbox Terminal Box	Pin	Three Phase : 1, 2, 3, Earth
			Single Phase : 1, 3, Earth
Sludge Return Pump	Junction Box fixed inside BioDisc Case	Pin	L1, N1, Earth
Loss of Rotation Alarm	Junction Box fixed to Motor Support Beam	Pin	6, 7, Earth

- 6.2.4. Set the panel leg(s) in a concrete base, minimum 250mm thick and prop the panel to prevent movement until the concrete has set. Allow 350mm minimum clearance from ground level to the bottom of the panel.
- 6.2.5. Connect the incoming power supply to the control panel, using suitable cable and current overload protection (See section 3.11.) Ensure that the panel is securely closed.




		Full Load Current (Amps)	
		BC	NC
Motor	240 volt single phase	1.0	1.0
	415 volt three phase	0.34	0.34
Sludge return pump	240 volt single phase only	N/A	2.2

**7.0 Ancillary Equipment**

Ancillary items should be installed in accordance with the Installation Guide supplied e.g. Crude Sewage Pump Station, Effluent Pump Station, Effluent Sample Chamber.

**8.0 Start Up**

- 8.1. Refer to the Owners Handbook for details of the Start Up Procedure.
- 8.2. We recommend the unit is commissioned by an approved engineer.
- 8.3. Once the unit has been installed it should be left filled with water. Please switch on the motor, following the procedure in the Owners Handbook and leave the unit running, even if there is no sewage being fed into the plant. If the unit has been installed with no operational power supply, then remove the motor/gearbox unit and store it in a dry or heated environment until such time as the unit is ready for permanent operation.

<b>DECLARATION OF CONFORMITY</b>	
Description of Machine	B Range BioDisc Sewage Treatment Plant
Model	.....
Serial Number (see cover label)	.....
Year of Manufacture	.....
Name of Manufacturer	KLARGESTER ENV., COLLEGE RD NORTH ,ASTON CLINTON, AYLESBURY, BUCKS, HP22 5EW.
<u>EUROPEAN DIRECTIVES:</u>	Machinery Directive 89/392/EEC    Low Voltage Directive 73/23/EEC Electromagnetic Compatible Directive 89/336/EEC
We declare that the equipment covered in this manual conforms with the essential Health and Safety requirements.	
<i>Alison Andrusan</i>	PRODUCT MANAGER WASTE WATER    1 JUNE 1997
	
	

BioDisc is the registered trademark of Klargester Environmental

SPECIFICATION	PART No.	REF
* ENCLOSURE	80200001	
* KEY LOCK	80200041	
* MCB 3A 2 POLE	32100121	F1
* 5 MTRS 20mm FLEXIBLE CONDUIT	70300001	
* 2 - GLAND FOR FLEXIBLE CONDUIT	70300011	
* 2 - 20mm LOCKNUTS	70300021	
* 2 - 20mm WASHERS	70300031	
* 1 METRE GALVANIZED ANGLE IRON	92200001	
* 5.25 MTRS 4 CORE 1mm FLEX CABLE	72300001	
* VINYL LABEL 'KLARGESTER'	K0033	
* VINYL LABEL 'DO NOT WALK ON COVER'	K0056	
* VINYL LABEL '230 VOLTS WARNING'	K0043	
* 2 - CABLE TIES	70500001	



PART No. E0181

ALL DIMENSIONS ARE IN MILLIMETRES - DO NOT SCALE

**TITLE**  
 BC/BD/BE BIDDISC  
 1 PHASE  
 CONTROL PANEL  
 WIRING DIAGRAM

**SCALE** 1:1     **SHEET SIZE** A4  
**DRAWING No.** 510101     **ISSUE** 2

**Klargester**  
*Treatment Systems*  
 Klargester Environmental Ltd.  
 College Road North, Aston Clinton,  
 Aylesbury, Bucks. HP22 5EW.  
 Tel:- 01296 633000  
 www.klargester.com

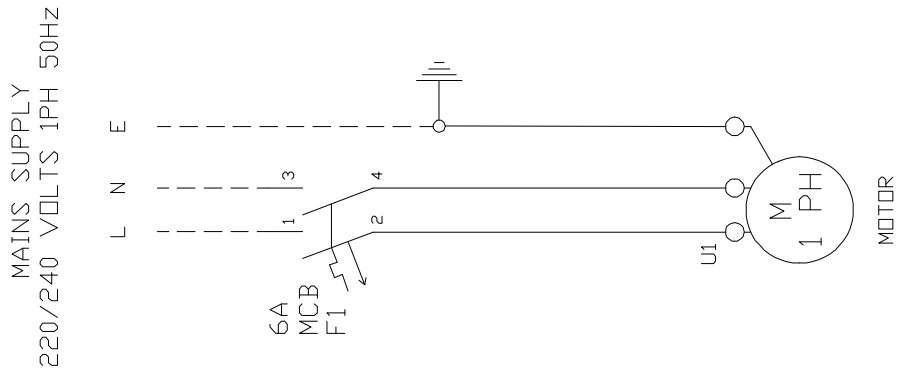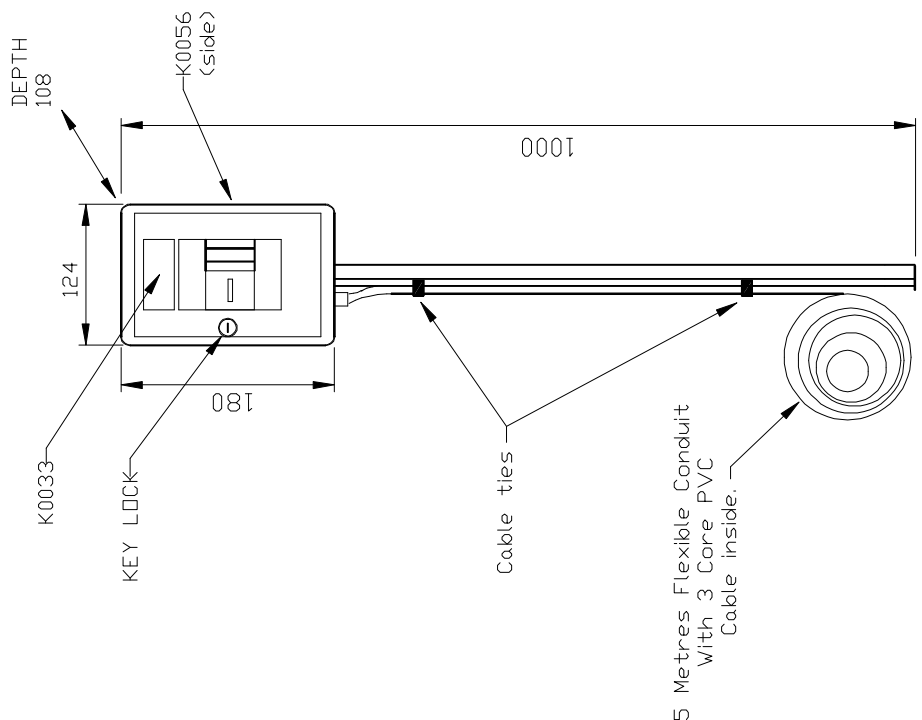

ISSUE	DATE	M.P.C.	DRAWN	INITIAL ISSUE	MODIFICATION
2	18.02.04	A.L.		BORDER UPDATE	
1	01.07.01	M.P.C.		INITIAL ISSUE	

This drawing is copyright and may not be reproduced or used without the written permission of Klargester Environmental Ltd.  
 KLARGESTER RESERVE THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE

THIRD ANGLE PROJECTION