



This information is brought to you by
Owls Hall Environmental working in
partnership with Klargester products.



Excellent Treatment

0845 375 1801
www.ohel.co.uk


Alarm Probe Installation

The tube is suitable for Klargester standard oil alarm systems only. Do not use for other equipment suppliers.


The probe should be lowered down the tube until it cannot be lowered any further.

The tube is designed to accommodate two types of probe. Resting stops position the alternate probe correctly, but allow the Klargester standard probe to drop to the bottom of the tube.

You should then refer to the manufacturers instructions to complete the probe installation.

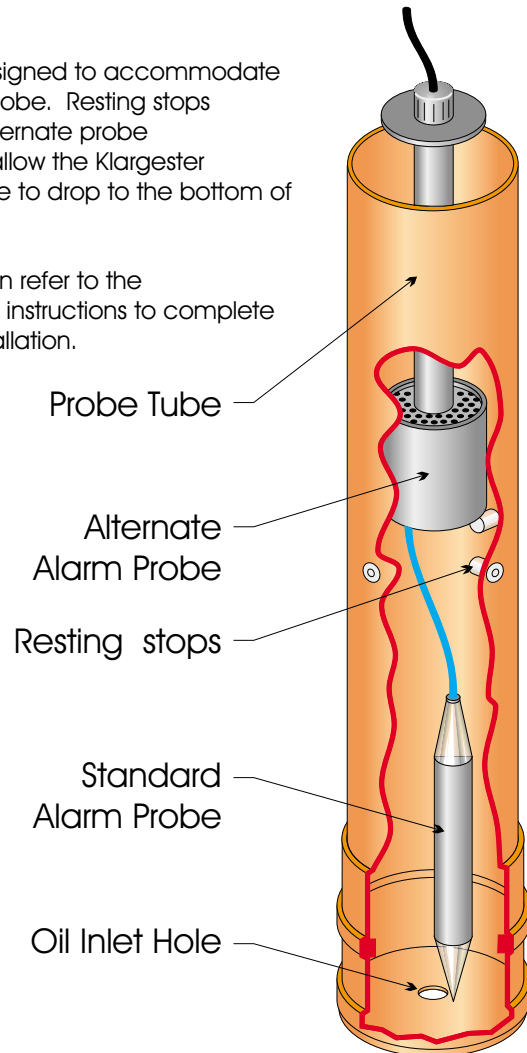

Alarm Probe Fitting Instructions for Light Liquid Separators

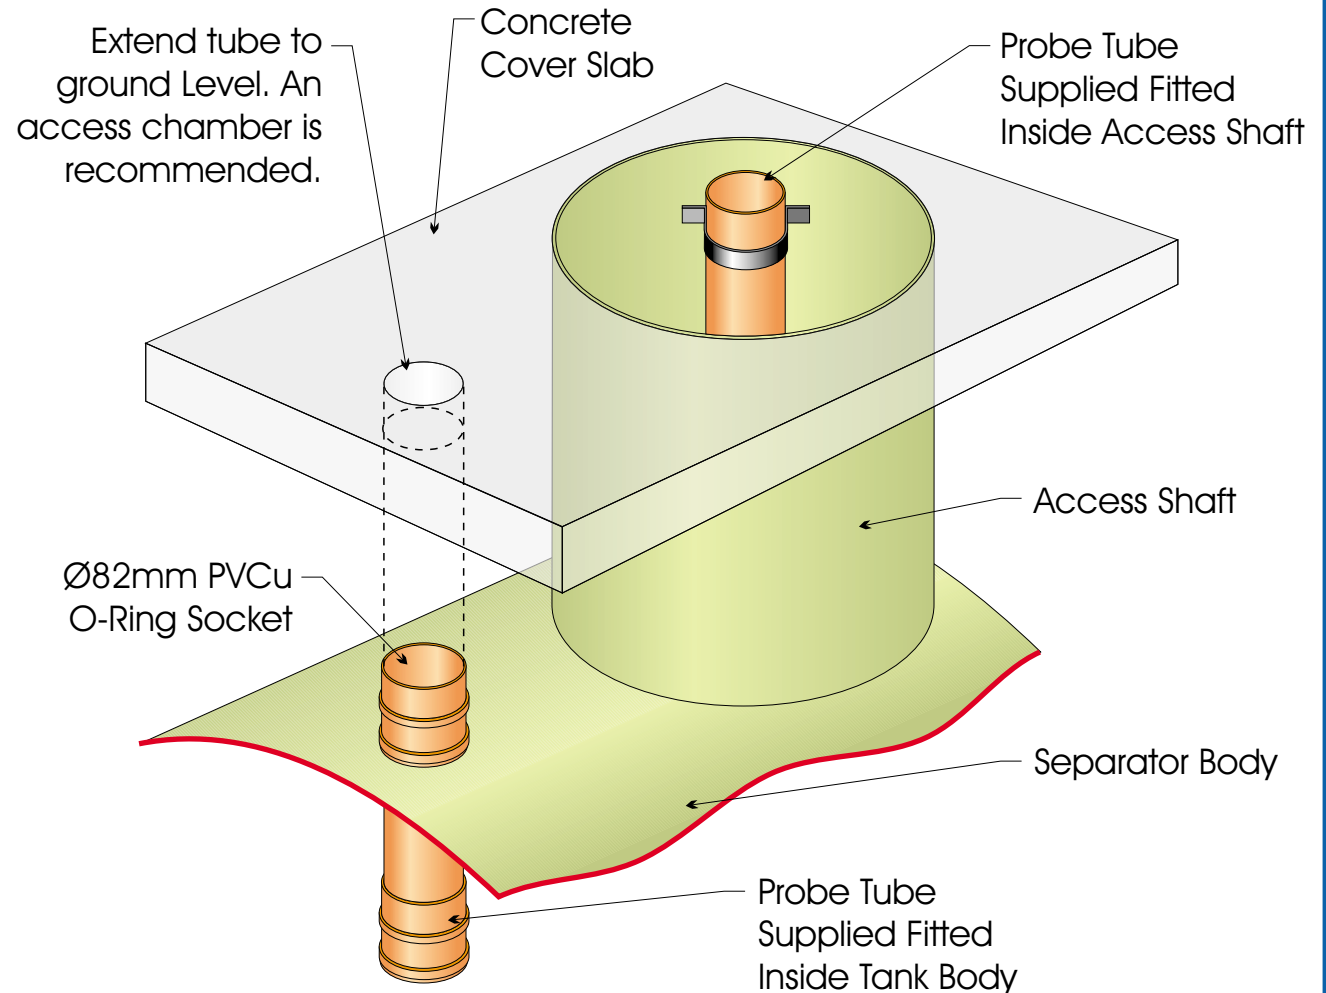

Note:-

The oil probe may be fitted in the access shaft or body of the Separator. This position will depend on the model of Separator ordered.